


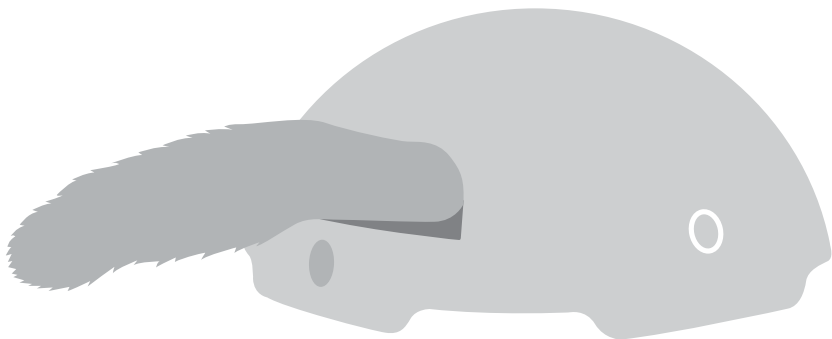

Fox Den Automatic Cat Toy

GTY00-16415 | Product Manual



Have questions about your toy or need training tips for your pet?

Our Customer Care representatives are here to help you.

Call our USA-based Customer Care Center at

+1 (866) 381-2785

USA & Canada: Mon-Fri 8am-8pm EST | Sat 9am-5pm EST

This product includes a one year warranty.
Call, click, or chat with us before you return your product.

premierpet.com

Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.



NOTICE, is used to address safe use practices not related to personal injury.



- This product is not a child's toy. This product is intended for cats, not for children or dogs.
- Do not allow unsupervised use while in the presence of children or dogs.
- Do not use this product until you have read the entire product manual.
- Do not use this product on an elevated surface such as a table or counter. Use on the floor only.
- This product should only be used in accordance with the instructions in the user guide.



- Adult supervision is required around pets. Do not allow unattended Play While You Are Away Mode until you know your pet uses the toy as intended.



- Inspect this product periodically for damage and discard product immediately if it appears worn or broken.
- Do not mix old and new batteries.
- Do not mix standard, alkaline or rechargeable batteries.
- Do not use rechargeable batteries.
- Exhausted batteries should be removed immediately. Do not dispose of batteries with household waste.


These instructions must be retained and passed on with ownership. Please read this entire product manual before use.

How it Works

The Fox Den Automatic Cat Toy is an automated, motion-activated cat toy that will encourage your cat to play. Simply insert batteries, choose which mode to use, and place Fox Den on the floor where the surface is flat. During One Time Play mode, the toy will play for 10 minutes, then turn off. During Play All Day mode, the toy will play every two hours, three times, for 10 minutes each. In between automatic play sessions, when the toy is resting, the motion sensor on the front of the toy will detect nearby motion, within several feet, and turn on automatically. If no motion is detected, the toy will rest until the next automatic play session or motion is detected again.

Battery Installation

1. Locate battery door on bottom of the toy (**A**).
2. Insert 3 AA batteries into the battery compartment (**B**).
3. Replace the battery door and ensure it is closed properly.

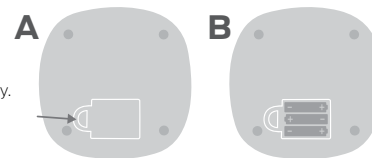

Operating Instructions

One Time Play

- Find the power button on the side of the toy. Press the button once quickly, then release, to power on.
- The toy will turn on immediately and play for 10 minutes, then power off automatically.
- To end the play session before 10 minutes, press the power button quickly once and release.

Play All Day

- Find the power button on the side of the toy. Press the button for 2-4 seconds, then release, to power on. The toy will beep three times to let you know when Play All Day mode is activated.
- Play All Day mode lasts for a 6.5 hour time period. From the beginning to the end of this mode, the toy will:
 - Play 10 minutes, rest for 2 hours. During rest time, motion sensor is on.
 - Play 10 minutes, rest for 2 hours. During rest time, motion sensor is on.
 - Play 10 minutes, rest for 2 hours, power off. During rest time, motion sensor is on.
- During rest time in Play All Day mode, if motion is detected within 3-4 feet in front of the toy, it will turn on for 2 minutes. Once the cat walks away, the toy will rest again within 2 minutes. Note: motion has to be detected in front of the toy, where the tail appears. Be sure to place the toy in a safe play area where the cat may walk by the front of it. There is a delay of 25 seconds after the 2 minutes of play before more motion is detected.
- To power off while in Play All Day mode, press the power button on the side of the toy quickly once, then release.

To Ensure Proper Function

- Do not mix old and new batteries.
- Do not mix standard, alkaline or rechargeable batteries.
- Do not use rechargeable batteries.
- Exhausted batteries should be removed immediately. Do not dispose of batteries with household waste.

Advice for Use

Apart from playing with this product, it is recommended that you interact with your pet and provide a variety of play activities. Opportunities for stimulation or the appropriate amount of daily exercise should be determined by a veterinarian.

Warranty

One Year Non-Transferable Limited Warranty

This Product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this Product and its terms can be found at www.premierpet.com.

Terms of Use and Limitation of Liability

1. Terms of Use

The use of this product is subject to your acceptance without modification of the terms, conditions and notices contained with this product. Use of this product implies acceptance of all such terms, conditions and notices. If you do not wish to accept these terms, conditions and notices, please return the product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care location together with proof of purchase for a full refund.

2. Proper Use

Proper use includes, without limitation, reviewing the entire product manual and any specific safety information statements. The specific temperament or size/weight of your pet may not be suitable for this product. If you are unsure whether this product is appropriate for your pet, please consult your veterinarian or certified trainer prior to use. For products used with pets where training is desired, Radio Systems Corporation recommends that these training products are not used if your pet is aggressive and accepts no liability for determining suitability in individual cases.

3. No Unlawful or Prohibited Use

This product is designed for use with pets only. This product is not intended to harm, injure or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any direct, indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the use or misuse of this product. The Purchaser assumes all risks and liability from the use of this product to the fullest extent permissible by law.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this product from time to time. If such changes have been notified to you prior to your use of this product, they shall be binding on you as if incorporated herein.

Compliance

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

CAUTION: Modification or changes to this equipment not expressly approved by Radio Systems Corporation may void the user's authority to operate the equipment.